



Contents

Chapter 1	Introduction	1-1
	System Features	1-1
	Supported Operating Systems	1-3
	Front Panel	1-4
	Back Panel	1-5
	Connecting External Devices	1-5
	Getting Help	1-6
Chapter 2	Using the Dell OpenManage Server Assistant CD	2-1
	Starting the <i>Dell OpenManage Server Assistant</i> CD	2-1
	Setup Mode	2-1
	Service Mode	2-2
	Navigating the CD	2-2
	Setting Up Your Server	2-2
	Server Setup Mode	2-2
	Utility Partition	2-3
	Running the System Diagnostics	2-3
	Asset Tag Utility	2-4
	Using the Asset Tag Utility	2-4
	Assigning and Deleting an Asset Tag Number	2-4
Chapter 3	Using the System Setup Program	3-1
	Entering the System Setup Program	3-2
	System Setup Screens	3-2
	Using the System Setup Program	3-3

System Setup Options	3-5
Time	3-5
Date	3-5
Diskette Drive A	3-5
IDE Drives: Primary (Drive 0,1); Secondary (Drive 0,1)	3-5
Reserved Memory	3-6
CPU Speed	3-6
CPU Bus Speed	3-6
Num Lock	3-7
Reset Button	3-7
Video DAC Snoop	3-7
Processor Serial Number	3-7
Processor 1 and Processor 2	3-7
Keyboard Errors	3-7
System Password	3-7
Password Status	3-8
Boot Sequence	3-8
Diskette First	3-8
Hard Disk Only	3-8
CD-ROM First	3-9
Device List	3-9
Setup Password	3-10
Auto Power On	3-11
Power Management	3-11
Saving Monitor Power	3-11
Chassis Intrusion	3-12
Mouse	3-12
Serial Port 1 and Serial Port 2	3-13
Parallel Port	3-13
Parallel Mode	3-13
IDE Controller	3-13
Diskette	3-14
Speaker	3-14
System Data	3-14
Using the System Password Feature	3-15
Assigning a System Password	3-15
Using Your System Password to Secure Your System	3-16
Deleting or Changing an Existing System Password	3-17
Using the Setup Password Feature	3-18
Assigning a Setup Password	3-18
Operating With a Setup Password Enabled	3-19
Deleting or Changing an Existing Setup Password	3-19

Disabling a Forgotten Password	3-19
Responding to Error Messages	3-19

Chapter 4 *Using the Resource Configuration Utility 4-1*

Configuring ISA and PCI Expansion Cards	4-1
How to Run the RCU	4-2
When to Run the RCU	4-2
Making Selections in the RCU	4-2
Using Online Instructions	4-3
Starting the RCU	4-3
Main Menu	4-4
Learn About Configuring Your Computer	4-4
Configure Computer	4-4
Set Date	4-4
Set Time	4-4
Maintain Resource Configuration Diskette	4-5
Exit From This Utility	4-5
Steps in Configuring Your Computer Menu	4-5
Step 1: Important Resource Configuration Information	4-5
Step 2: Add or Remove Boards	4-5
Adding an Expansion Card	4-6
Repositioning an Expansion Card	4-7
Removing an Expansion Card	4-7
Step 3: View or Edit Details	4-8
Step 4: Examine Switches or Print Report	4-9
Step 5: Save and Exit	4-9
Advanced Menu	4-9
Lock/Unlock Boards	4-10
View Additional System Information Menu	4-10
Set Verification Mode Menu	4-10
Maintain SCI Files Menu	4-10
Resolving Resource Conflicts	4-10
Removing a Card That Conflicts With the Card You Just Installed	4-11

Appendix A *Technical Specifications A-1*

Appendix B *I/O Ports and Connectors B-1*

Serial and Parallel Ports	B-1
Adding an Expansion Card Containing Serial or Parallel Ports	B-3
Serial Port Connectors	B-4
Parallel Port Connector	B-4
Keyboard and Mouse Connectors	B-6

Keyboard Connector	B-6
Mouse Connector	B-7
Video Connector	B-8
USB Connectors	B-9

Appendix C *Maintaining the System* C-1

Data Preservation	C-1
Scheduling Backups	C-1
Backup Devices	C-1
Recovering Data	C-2
Cleaning System Components	C-2
Recommended Tools and Accessories	C-2
Cleaning the Computer, Monitor, and Keyboard Exteriors	C-3
Cleaning Drives	C-3
Environmental Factors	C-4
Temperature	C-4
Humidity	C-5
Altitude	C-5
Dust and Particles	C-5
Corrosion	C-6
ESD	C-6
Electromagnetic and Radio Frequency Interference	C-6
Magnetism	C-7
Shock and Vibration	C-7
Power Source Interruptions	C-8
Power Protection Devices	C-8
Surge Protectors	C-9
Line Conditioners	C-9
Uninterruptible Power Supplies	C-9

Appendix D *Regulatory Notices* D-1

FCC Notices (U.S. Only)	D-2
Class A	D-2
Class B	D-3
IC Notice (Canada Only)	D-3
CE Notice (European Union)	D-4
Battery Disposal	D-4
EN 55022 Compliance (Czech Republic Only)	D-5
VCCI Notice (Japan Only)	D-5
Class A ITE	D-5
Class B ITE	D-6

MIC Notice (Republic of Korea Only)	D-6
Class A Device	D-6
Class B Device	D-7
Polish Center for Testing and Certification Notice	D-7
Wymagania Polskiego Centrum Badań i Certyfikacji	D-8
Pozostałe instrukcje bezpieczeństwa	D-8
NOM Information (Mexico Only)	D-9
Información para NOM (únicamente para México)	D-10
BSMI Notice (Taiwan Only)	D-11

Appendix E *Limited Warranty and Return Policy. E-1*

Three-Year Limited Warranty (U.S. Only)	E-1
Coverage During Year One	E-1
Coverage During Years Two and Three	E-2
General Provisions	E-2
Three-Year Limited Warranty (Canada Only)	E-3
Coverage During Year One	E-4
Coverage During Years Two and Three	E-4
General Provisions	E-5
One-Year End-User Manufacturer Guarantee (Latin America and the Caribbean Only)	E-5
Guarantee	E-5
Exclusions	E-6
Making a Claim	E-6
Limitation and Statutory Rights	E-6
“Total Satisfaction” Return Policy (U.S. and Canada Only)	E-7

Glossary

Index

Figures

Figure 1-1. Front Panel	1-5
Figure 3-1. System Setup Screens	3-4
Figure 3-2. Sample Device List Screen	3-10
Figure 4-1. View or Edit Details Screen (Example)	4-8
Figure B-1. I/O Ports and Connectors	B-2
Figure B-2. Pin Numbers for the Serial Port Connectors	B-4
Figure B-3. Pin Numbers for the Parallel Port Connector	B-5
Figure B-4. Pin Numbers for the Keyboard Connector	B-6
Figure B-5. Pin Numbers for the Mouse Connector	B-7
Figure B-6. Pin Numbers for the Video Connector	B-8
Figure B-7. Pin Numbers for the USB Connectors	B-9

Figure D-1.	VCCI Class A ITE Regulatory Mark	D-5
Figure D-2.	VCCI Class B ITE Regulatory Mark	D-6

Tables

Table 2-1.	Utility Partition Main Menu Options	2-3
Table 2-2.	Asset Tag Command-Line Options	2-5
Table 3-1.	System-Setup Navigation Keys	3-3
Table 3-2.	Power Time-Out Periods	3-12
Table A-1.	Technical Specifications	A-1
Table B-1.	Pin Assignments for the Serial Port Connectors	B-4
Table B-2.	Pin Assignments for the Parallel Port Connector	B-5
Table B-3.	Pin Assignments for the Keyboard Connector	B-7
Table B-4.	Pin Assignments for the Mouse Connector	B-7
Table B-5.	Pin Assignments for the Video Connector	B-8
Table B-6.	Pin Assignments for the USB Connectors	B-9